


Buttstock Assembly

FOLLOW STEPS 1 THROUGH 4 TO CONFIGURE THE LONESTAR RIG ON YOUR FIXED BUTTSTOCK WEAPON. USE THE ASSEMBLY PARTS LIST FOR REFERENCE.


Instructions for LONE STAR RIG Assembly

ASSEMBLY PARTS LIST

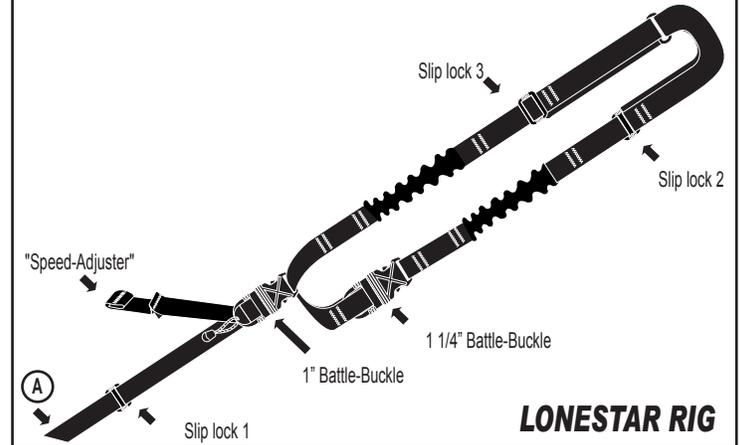


1

Loop (A) around the narrow part of the buttstock or through side loop as shown

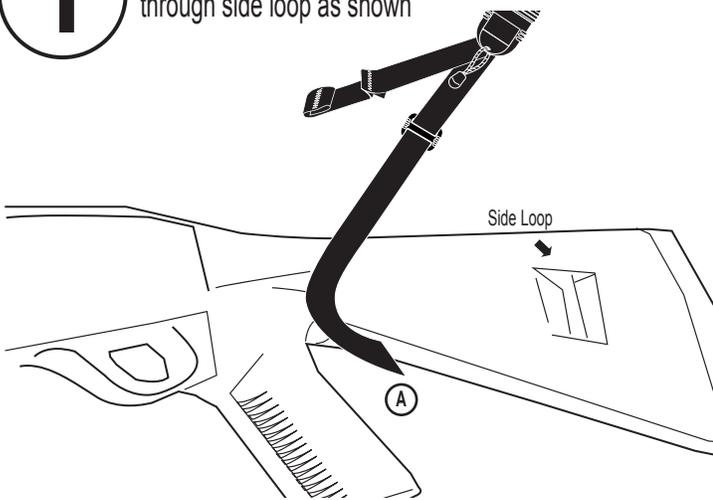


2

Insert (A) through Slip lock 1 leaving at least 2" of loose webbing on tail

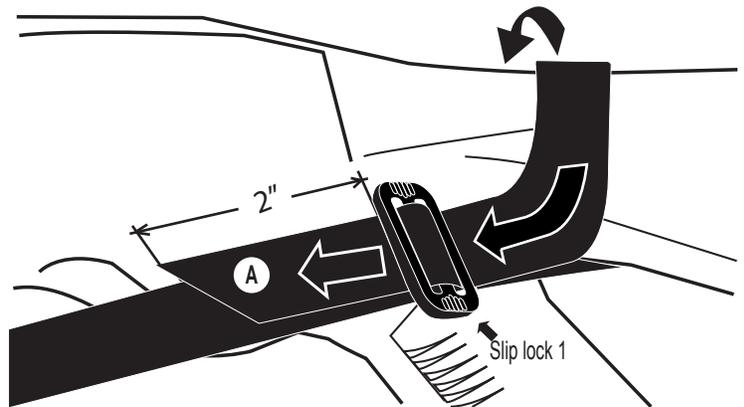

3

Use the "Speed Adjuster", Slip lock 2 and 3 for adjustment purposes

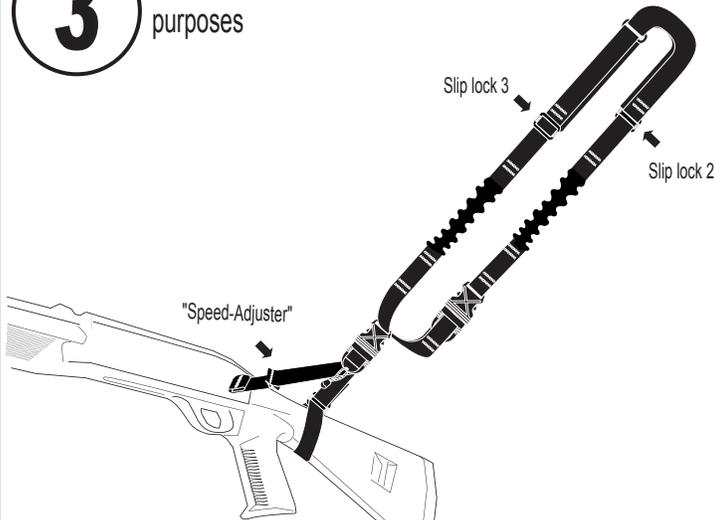

4

Use the 1" Battle-Buckle or the 1 1/4" buckle for quick release of your weapon



SPEC.-OPS.[®] BRAND

Guaranteed for life.




MADE IN USA

M4 Instructions for LONESTAR RIG Assembly

ASSEMBLY PARTS LIST

NOTE: USE ONLY on M4 carbines with receiver mounted side-swivels

* Single point sling adapter not included

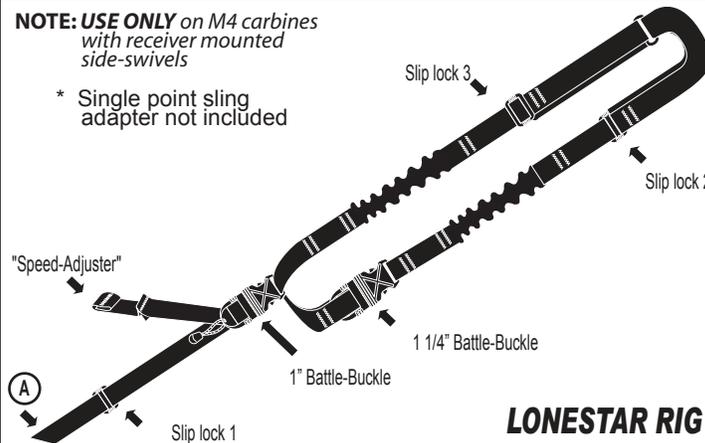

LONESTAR RIG




Side Swivel Assembly

FOLLOW STEPS 1 THROUGH 4 TO CONFIGURE THE LONESTAR RIG ON YOUR COLLAPSIBLE BUTTSTOCK WEAPON. USE THE ASSEMBLY PARTS LIST FOR REFERENCE.


1

Insert (A) through the rifle side swivel.

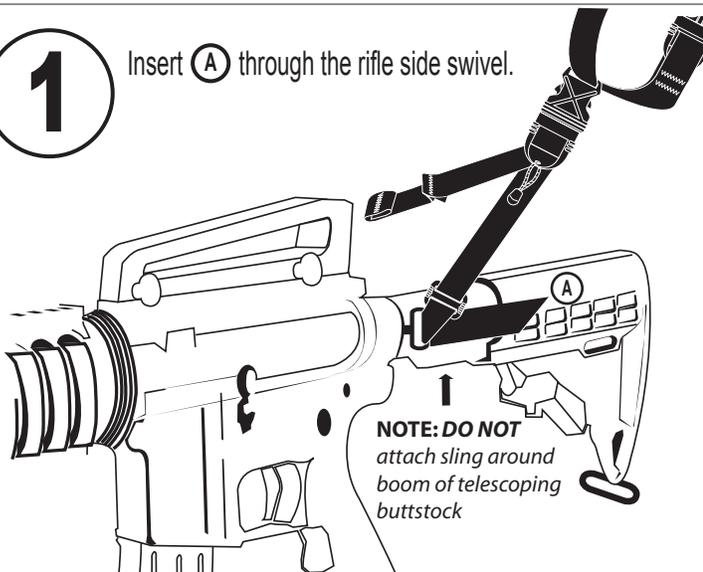


2

Insert (A) through Slip lock 1 leaving at least 2" of loose webbing on tail.

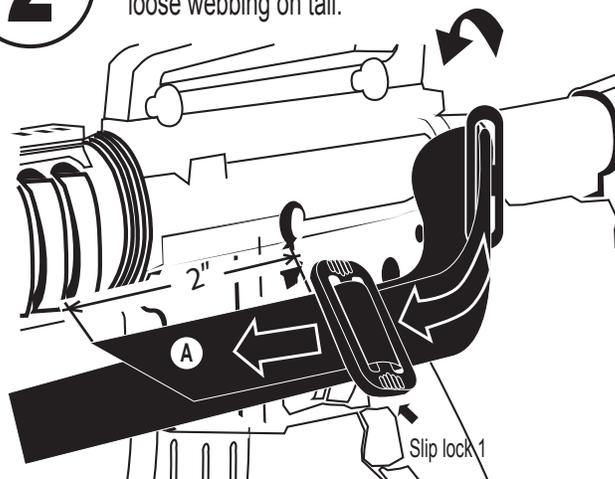

3

Use the "Speed Adjuster", Slip lock 2 and 3 for adjustment purposes.

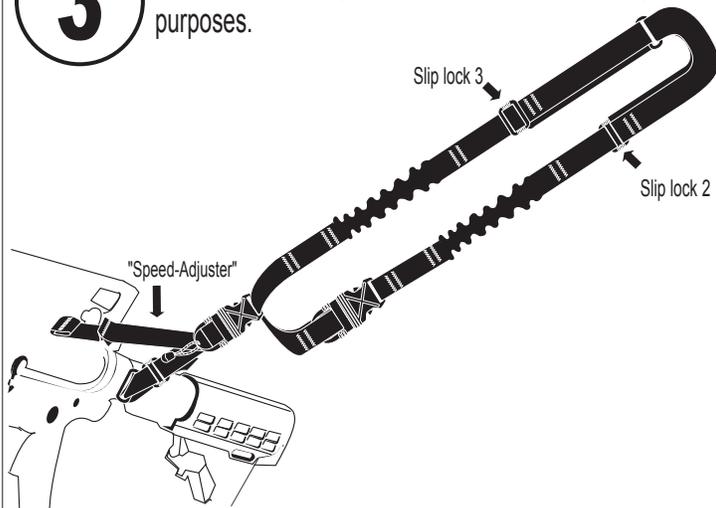

4

Use the 1" Battle-Buckle or the 1 1/4" buckle for quick release of your weapon.

