

SPEC.-OPS[®] BRAND

IMPROVED DESIGN




M-16 Assembly

Assembly Parts List

Instructions for Sling 101 "CQB"

Fits Collapsible and Fixed Stock


WORKS FOR EITHER SIDE OR BOTTOM SLING SWIVELS

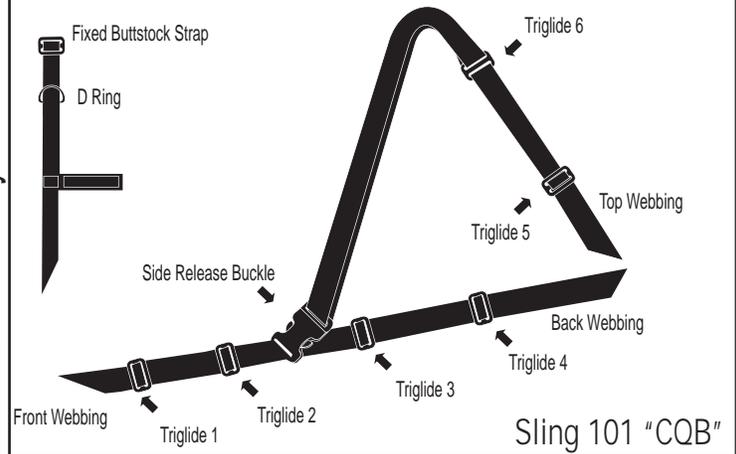


Sling 101 "CQB"

FOLLOW STEPS 1 THROUGH 6 FOR THE ASSEMBLY OF THE Sling 101 "CQB". USE THE ASSEMBLY PARTS LIST FOR REFERENCING THE DRAWINGS.
NOTE: THE FIXED BUTTSTOCK STRAP IS INTENDED FOR THE ASSEMBLY OF THE Sling 101 "CQB" ON M-16 RIFLES ONLY.


- 1** Insert and loop the shorter piece of webbing of the *Fixed Buttstock Strap* through the attachment point and secure it using the hook & loop

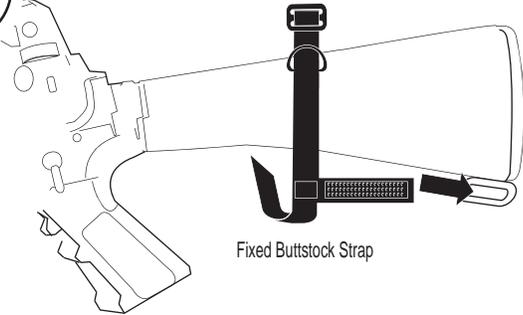


- 2** Insert the loose end of the *Fixed Buttstock Strap* through the triglide and secure it

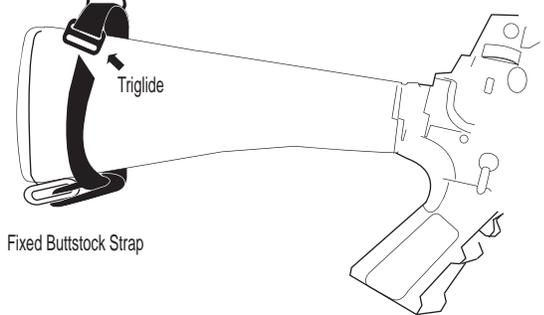


- 3** Insert the *Back Webbing* of the Sling 101 "CQB" through the loop created between the *Bartacks* on the *Fixed Buttstock Strap* and secure it using *Triglide 4*

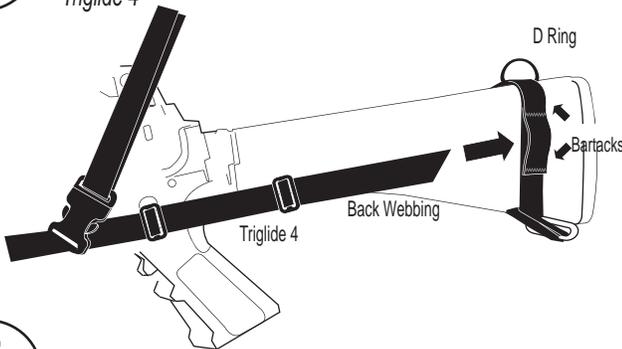

- 4** Insert the *Top Webbing* of the Sling 101 "CQB" through the *D Ring* and secure it using *Triglide 5*

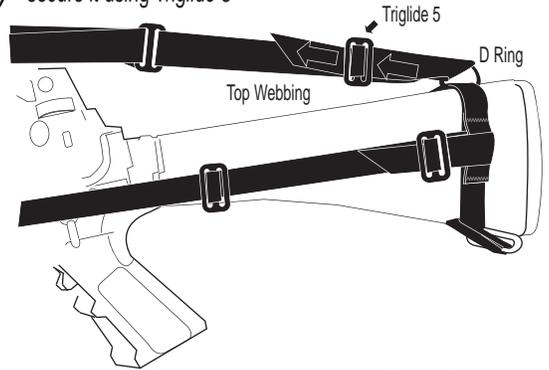

- 5** Place your fist between the sling and the rifle, as shown, and insert the *Front Webbing* through the *M-16 Front Attachment Point*

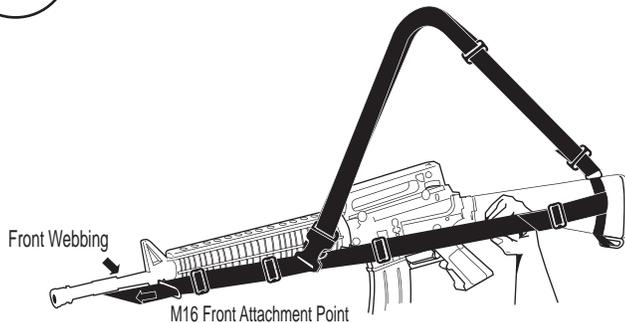

- 6** Back loop the *Front Webbing* of the Sling 101 "CQB" through *Triglide 1*. Now you are all set to use your Sling 101 "CQB" on your fixed buttstock rifle!

