


**MAMBA™** Combat Fighting Sling  
Fixed Buttstock Installation Instructions


**FOLLOW STEPS 1 THROUGH 7 TO CONFIGURE MAMBA™ ON YOUR FIXED BUTTSTOCK WEAPON. USE THE ASSEMBLY PARTS LIST FOR REFERENCE.**

**Instructions for MAMBA™ on M-16**


**1** FIRST, remove the sling from the package and separate it into three main components, as shown.

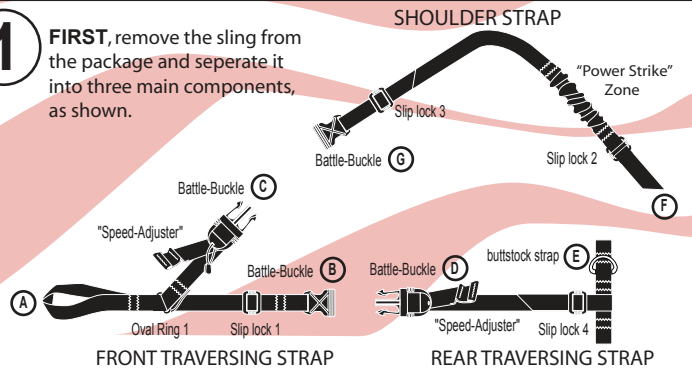


**2** Slide the fixed buttstock strap "E" of the REAR TRAVERSING STRAP over the fixed buttstock of the weapon.

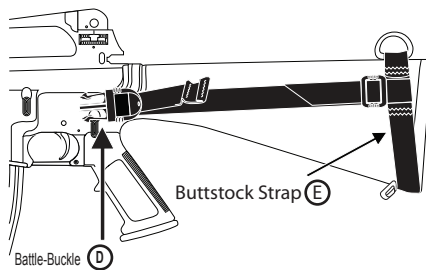


**3** Pass the loop "A" of the FRONT TRAVERSING STRAP through the front sling mount of the weapon. Then feed Battle-Buckle "B" through the loop "A" followed by the rest of the FRONT TRAVERSING STRAP.

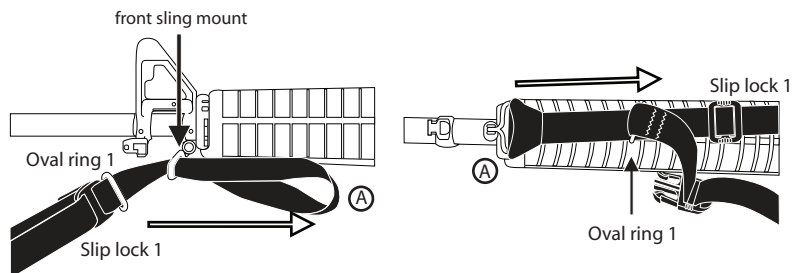


**4** Connect Battle-Buckle "B" of the FRONT TRAVERSING STRAP to Battle-Buckle "D" of the REAR TRAVERSING STRAP.

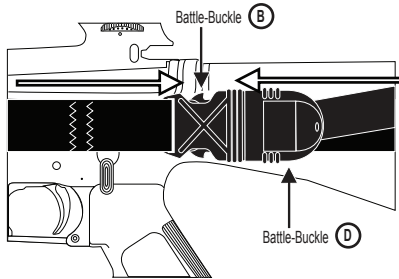

**5** Slide "F" of the SHOULDER STRAP through the D Ring on Buttstock Strap "E" of the REAR TRAVERSING STRAP. Then slide "F" through Slip lock 2.

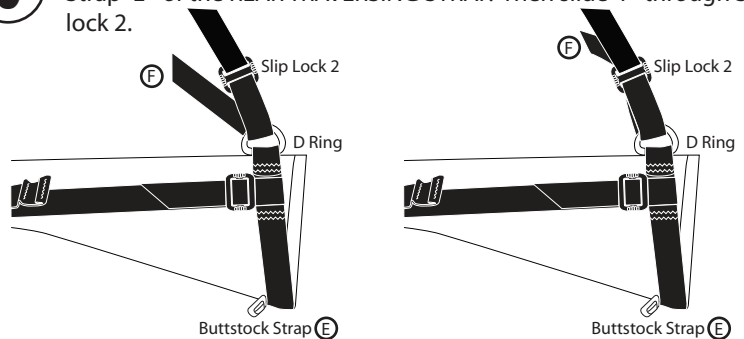

**6** Connect Battle-Buckle "C" of the FRONT TRAVERSING STRAP to Battle-Buckle "G" of the SHOULDER STRAP.

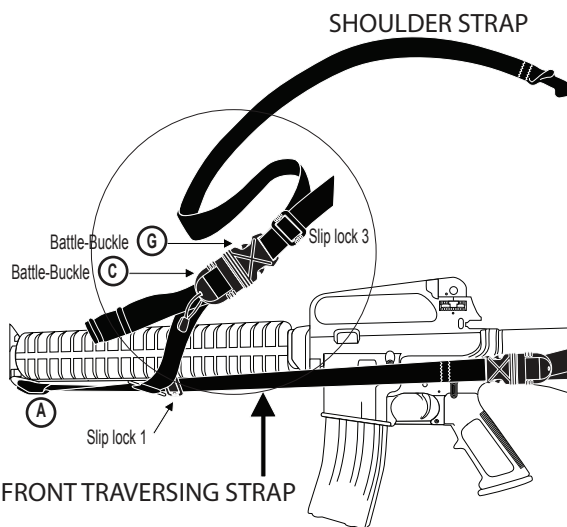

**7** Use the "Speed-Adjuster", Slip lock 2, 3, and 4 for adjustment purposes.

