


SPEC.-OPS[®] BRAND

Instructions for Sling 101 M-16 Assembly

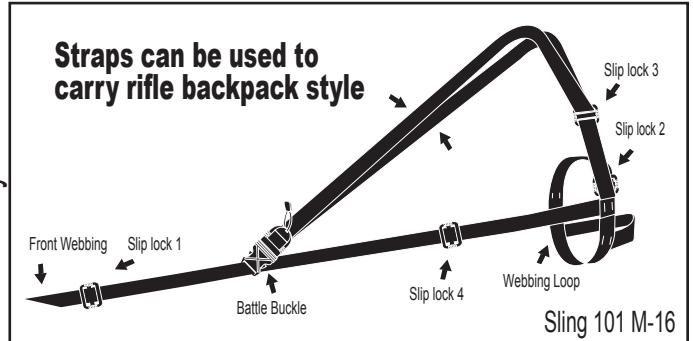


Assembly Parts List



FOLLOW THESE INSTRUCTIONS STEP BY STEP FOR THE ASSEMBLY OF THE SLING 101 M-16. THE SLING 101 M-16 IS LOOPED AND ATTACHED TO THE M-16 IN TWO DIFFERENT LOCATIONS, FRONT AND BACK OF THE RIFLE. FOLLOW STEPS 1 THROUGH 5 UNTIL YOU FINISH THIS SIMPLE PROCESS.


1

Insert the webbing loop of the Sling 101 M-16 onto the rifle buttstock

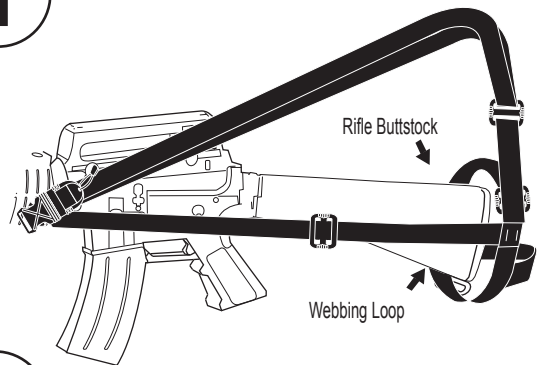


2

Cinch the loop tightly around the rifle buttstock using Slip lock 2. Make sure the loop is tight so it won't fall off

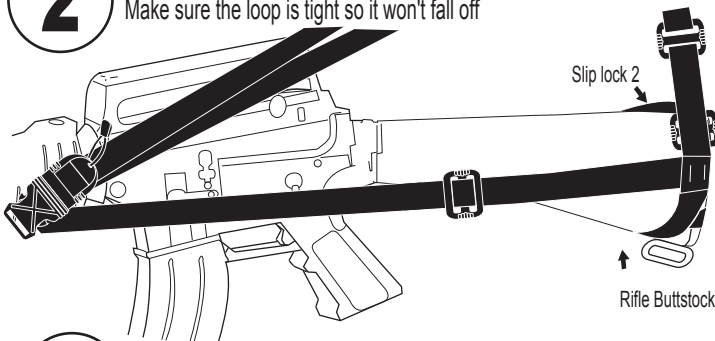


3

Place your fist between the sling and the rifle, as shown, and insert the front webbing through the front attachment point of the M-16.

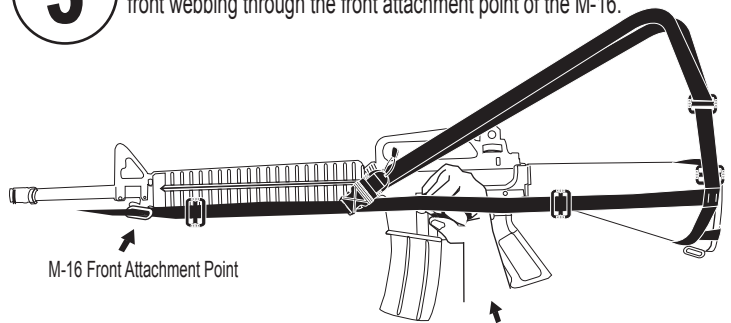

4

Loop the webbing of the Sling 101 M-16 through Slip lock 1.

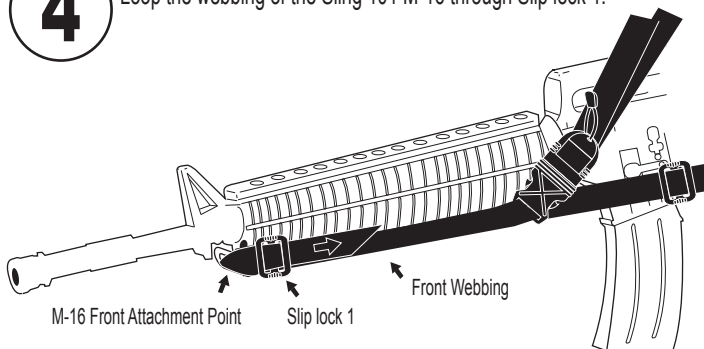

5

Now you are all set to use your Sling 101 M-16.

